Installation Instructions For the VAC PACK SYSTEM

(Chair mounted assistant's instrumentation)

INSTALLING THE UPPER ASSEMBLY

1. Locate the drill marks in the chair back and drill through with a 9/32“ drill (See Figure 1).
2. Remove the screws that hold the standoffs to the bracket and cover (See Figure 2).
3. Position the bracket on the chair back with the screws going through the chair back and into the bracket (See Figure 3).
4. Install the standoffs onto the screws and tighten (See Figure 4).
5. Install the cover (See Figure 5).

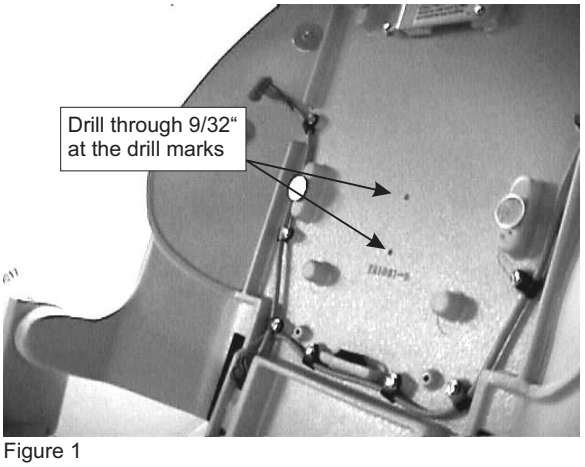

Figure 1

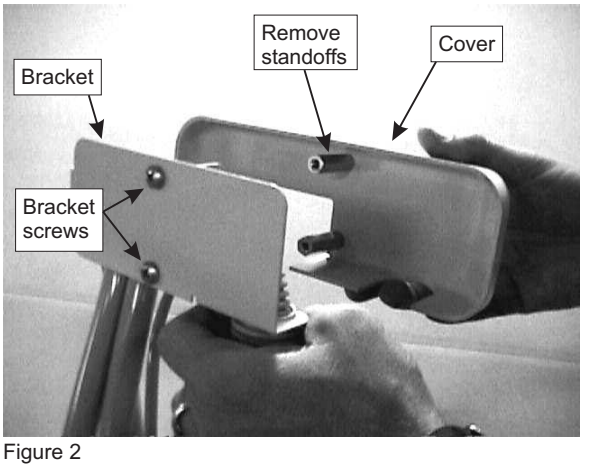

Figure 2

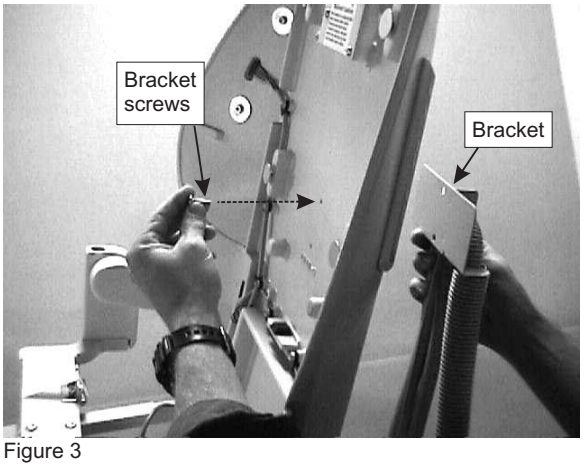

Figure 3

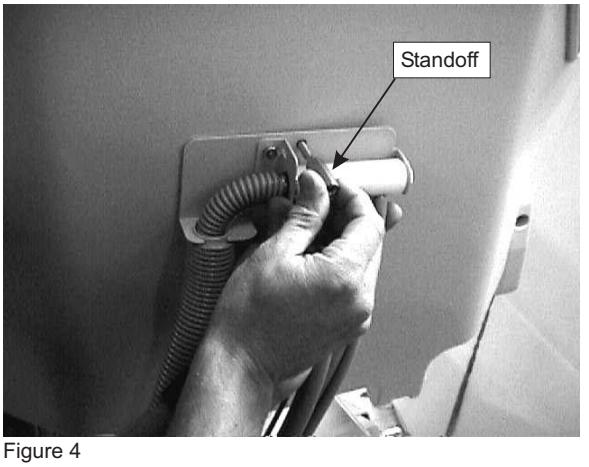

Figure 4

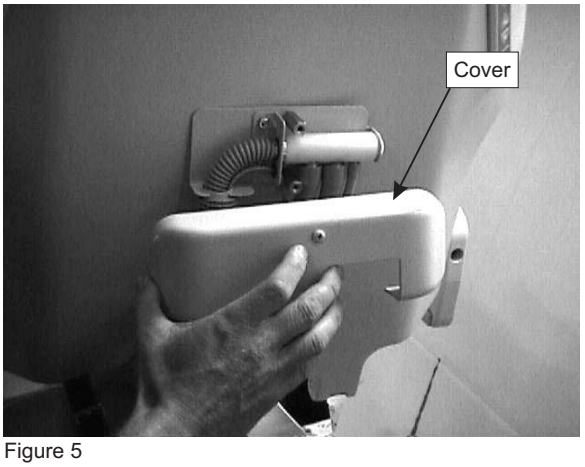

Figure 5

INSTALLING THE LOWER ASSEMBLY

1. Disassemble the lower assembly by removing the painted screws and washers. Pull out the two standoffs(See Figure 6).
2. Screw the standoffs into the chair frame and tighten (See Figure 7).
3. Remove the solids collector cap and basket and pull the cover over the solids collector and slide the cover up the umbilical toward the upper assembly (Do not disconnect the tubing).
4. Feed the air and water tubes into the 3/4“ umbilical that goes into the chair. (See Figure 8) (Refer to the flow diagram and/or the unit installation instruction to connect these tubes)
5. Connect the 1/2“ vacuum hose to the bottom of the solids collector (See Figure 9) .
6. Position the platform cover on the chair frame and standoffs. Re-aasemble the lower assembly and tighten the screws (See Figure 10).
7. Install the two side covers with the painted screws (See Figure 11)..

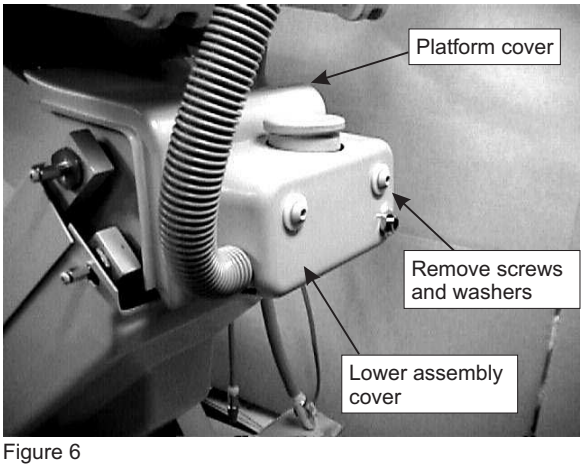

Figure 6

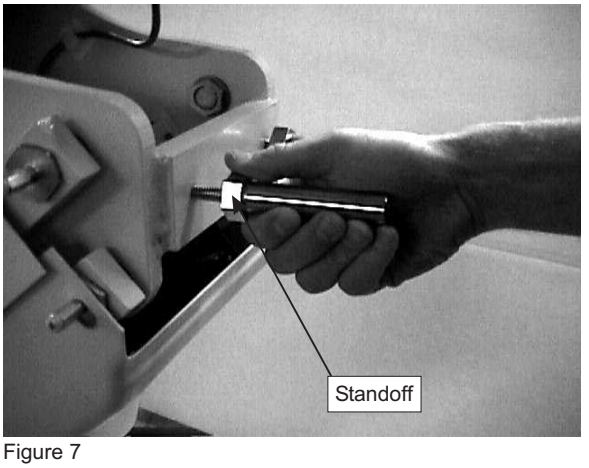

Figure 7

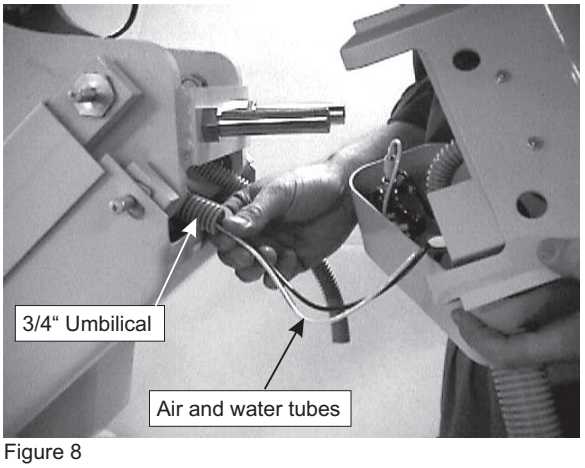

Figure 8

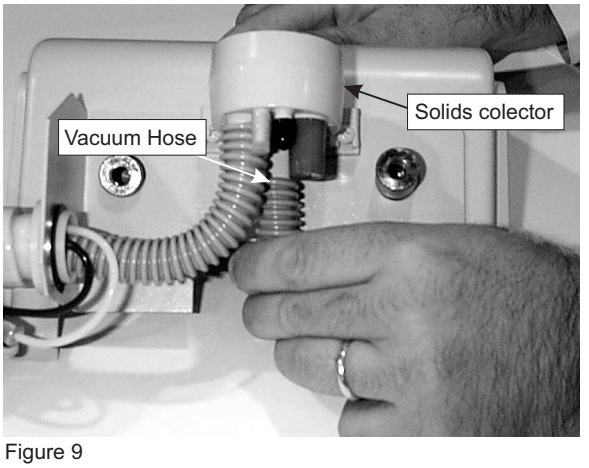

Figure 9

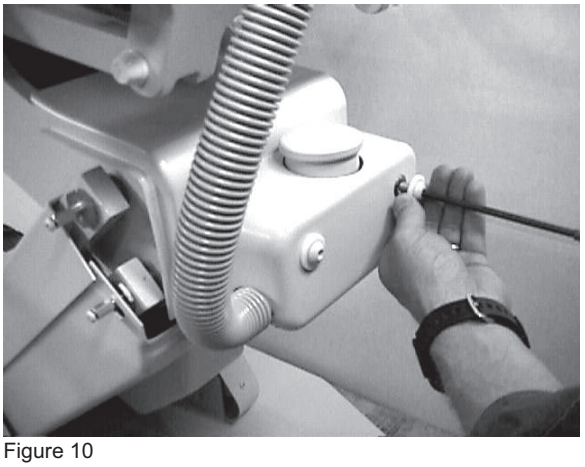
Figure 10

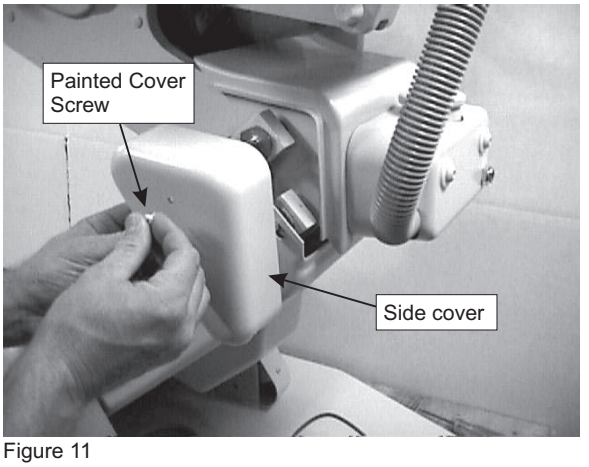

Figure 11

Control locations

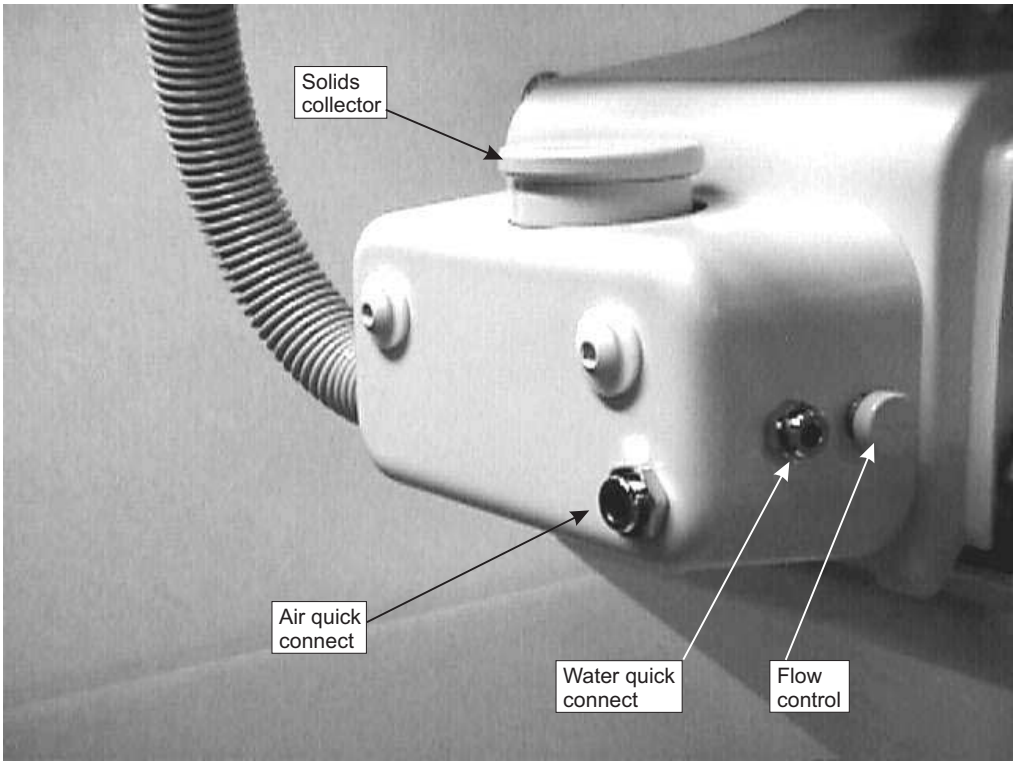

Knight®
by Midmark
Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542